
Ambient Weather BC-2000 Smart Battery Charger User Manual



Table of Contents

1	Introduction	2
2	Important Notes and Warnings	2
3	Getting Started	4
3.1	Parts List	4
3.2	Initial Operation	4
3.3	Quick Start Guide	5
4	Basic Features	5
4.1	General Display Information	5
4.2	Function Keys	5
5	Detailed Operation	6
5.2.1	Initialization Mode	6
5.2.2	Changing Modes (MODE button)	6
5.2.3	Slot Selection (SLOT button)	6
5.2.4	Adjusting the Charging Current (CURRENT button)	6
5.2.5	Display Modes (DISPLAY button)	7
5.2.6	Operational Modes	8
6	Overheating Protection	8
7	Maintenance	9
8	Specifications	9
9	Accessories	9
10	Glossary of Terms	9
11	Troubleshooting Guide	10
12	Liability Disclaimer	10
13	FCC Statement	11
14	Warranty Information	11
15	Disposal	12

1 Introduction

Thank you for your purchase of the Ambient Weather BC-2000 Smart Battery Charger. The following user guide provides step by step instructions for operation and troubleshooting. To download the latest manual and additional troubleshooting tips, please visit:

<http://ambientweather.wikispaces.com/bc2000>

2 Important Notes and Warnings

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions.



Before using this product, please read the following warning and cautions:

1. Read these instructions – All the safety and operating instructions should be read before the unit is operated.
2. Keep these instructions – The safety and operating instructions should be kept for future reference.
3. Heed all warnings – All warnings on the device and in the operating instructions should be adhered to.
4. Follow all instructions – All operation and use instructions should be followed
5. Operate and store in a dry location. Do not operate outside.
6. The product must be protected against electromagnetic fields, static electrical fields, extreme temperatures, direct sunlight and moisture. Only operate within specified temperature range.
7. Do not use this item near water – The device should not be used near water; for example, near a bath tub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
8. Clean only with dry cloth – The device should be cleaned only as recommended by the manufacturer.
9. Do not use near any heat sources such as radiators, heat registers, stoves, or other device (including amplifiers) that produce heat.
10. Do not place near a fire. The batteries can explode.
11. Only use attachments / accessories recommended by the manufacturer.
12. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as liquid has been spilled or the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. This device shall not be exposed to dripping or splashing water and that no object filled with liquids shall be placed on the device.
14. Unplug immediately if liquid has been spilled or any object has fallen into the unit.
15. The product should not be connected immediately after it has been brought from an area of cold temperature to an area of warm temperature. Condensed water may destroy the product. Wait until the product adapts to the new ambient temperature before use.
16. Sufficient ventilation is essential when operating the charger. Never cover the ventilating slots of the charger. Please take notice of ambient temperature operation above 96 degF (35 degC). The device is more likely to enter the protection mode, and longer charging time is required.

17. The device must be connected to a power supply only of the type described in the operating instructions or as marked on the device. Do not overload wall outlet.
18. Unplug the AC adapter when not in use.
19. Danger of explosion if battery is incorrectly installed (reverse polarity), non-rechargeable batteries are used, or a non-specified battery type is used.
20. Do not attempt to dismantle, open or repair this product yourself. If a fault occurs, seek advice from Ambient Weather support only.
21. The product must not be exposed to substantial mechanical strain or strong vibrations.
22. Unauthorized conversion and/or modification of the device are inadmissible because of safety and approval reasons (CE, UL and FCC). Any usage other than described in this manual is not permitted and can damage the product and lead to associated risks such as short-circuit, fire, electric shock, etc.

Battery Safety Instructions

1. If the battery electrolyte in the cells should get on your skin, thoroughly wash with soap and water. If in the eyes, rinse thoroughly with cool water. Immediately seek medical attention.
2. Leaking or damaged batteries might cause acid burns when in contact with skin, therefore use suitable protective gloves to handle corrupted batteries.
3. Charge batteries on a fireproof surface away from flammable items or liquids.
4. The battery manufacturer's instruction manual must be observed before they are charged.
5. Correct polarity must be observed while inserting the batteries.
6. Non-rechargeable batteries, rechargeable alkaline batteries (RAM), lead acid batteries and lithium batteries must not be charged with this product. These batteries can explode.
7. Batteries should be removed from the device if not used for a long period of time to avoid damage through leaking.
8. Keep batteries out of reach of children. Batteries can be swallowed and represent a choking hazard.
9. Batteries must not be dismantled, short-circuited or thrown into fire.

3 Getting Started

Figure 1 references the BC-2000 battery charger.

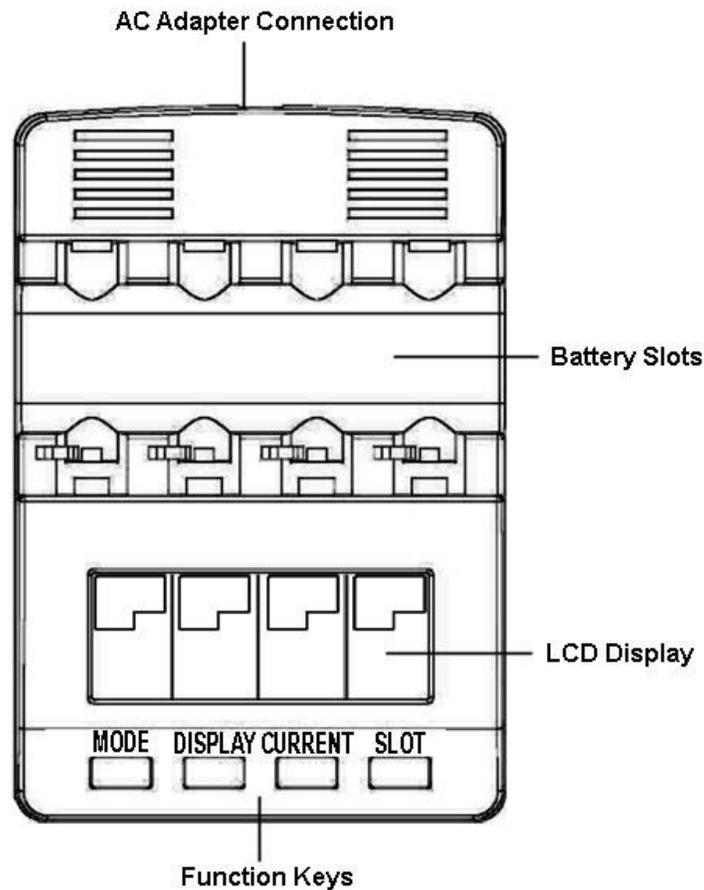


Figure 1

3.1 Parts List

QTY	Part Number	Item
1	BC-2000	Battery Charger
1	BC-2000-AC	AC Adapter
1	BC-2000-MANUAL	User Manual

3.2 Initial Operation

Plug the BC-2000 into wall power using the AC adapter (included). The backlight will turn on, all segments are momentarily displayed, and null (or no value) will be displayed in each battery slot (if no battery is installed). The charger is now ready for use.

Only use the AC adapter shipped with this unit.

NOTE: Always insert the negative pole of the battery first into the slot, then press that positive pole

of the battery into place.

3.3 Quick Start Guide

Although the manual is comprehensive, much of the information contained may be intuitive or not required for simple use. The following are simple steps for recharging batteries.

1. Plug in the BC-2000 to AC power.
2. Insert 1 to 4 batteries into the battery slots.
3. Charge until the display shows “Full”.

4 Basic Features

- The product is intended to charge and discharge NiCd or NiMH rechargeable batteries.
- It provides four independent charging slots for AA/AAA rechargeable batteries. The charger can also optimize and test the maximum capacity of the rechargeable batteries.
- The charger can charge batteries of different sizes (AAA and AA), types (NiCd or NiMH) and capacities at the same time.
- The charger integrates the voltage change over time, referred to as the “minus delta voltage (- ΔV)”, and automatically terminates charging.
- When the battery is fully charged, the charger will automatically continue to provide a trickle charge. Trickle charging prevents the rechargeable batteries from being overcharged, and compensates for self-discharging of the batteries.
- The charger also includes over-temperature protection, and will shut off the current flow to protect the rechargeable batteries and charger itself from overheating.

4.1 General Display Information

Each charging slot has an informative display, showing various operational modes and display modes.

The operational modes are as follows:

1. Charge Mode
2. Discharge Mode
3. Refresh Mode
4. Test Mode
5. Quick Test Mode

The display modes are as follows:

1. Charge/discharge Voltage
2. Charge/discharge Current
3. Charge/discharge Time Elapsed
4. Charge/discharge Accumulated Capacity

The charger backlight will turn on after any key is pressed. The backlight will automatically turn off after 10 seconds if no more buttons are pressed.

4.2 Function Keys

MODE	Reference Section 5.2.2
DISPLAY	Reference Section 5.2.5
CURRENT	Reference Section 5.2.4
SLOT	Reference Section 5.2.3

5 Detailed Operation

5.2.1 Initialization Mode

Once a rechargeable battery is inserted, the present voltage (for example, **1.12V**) will be displayed for 3 seconds, then the default charging current (**400mA**) **Charge** will be displayed for another 3 seconds. If the battery is fully charged, **FULL** will be displayed.

If the **MODE** or **CURRENT** button is not pressed during the next 6 seconds, the charging process will begin (normal working mode).

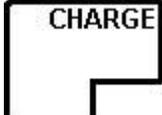
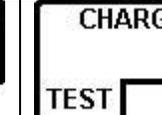
If any button is pressed, the unit will wait for another 10 seconds before entering the normal working mode.

5.2.2 Changing Modes (MODE button)

Press and hold the **MODE** button for 2 seconds to change the working mode selection for all four battery slots. All four battery slots will flash.

If you wish the change the mode for a particular slot, press the **SLOT** button until the desired slot is flashing.

Press the **MODE** button to toggle between **Charge**, **Discharge**, **Refresh**, **Test**, and **Quick Test** mode.

				
Charge	Discharge	Refresh	Test	Quick Test

5.2.3 Slot Selection (SLOT button)

The **SLOT** button is used to select the desired slot for the different working modes, charge current or display mode. When a slot is selected, the LCD display will flash.

The sequence is as follows:

1 -> 2 -> 3 -> 4 -> all four slots -> exit

5.2.4 Adjusting the Charging Current (CURRENT button)

Once the normal working mode begins, the charging current can no longer be changed.

The only way to change the charging current is by re-inserting the rechargeable batteries or re-powering the charger by disconnecting and reconnecting the AC adapter, and pressing the **CURRENT** button to program a different charge current.

If you want to adjust the charge current for each battery, press the **CURRENT** button after inserting the battery.

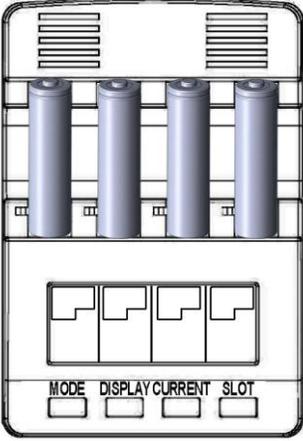
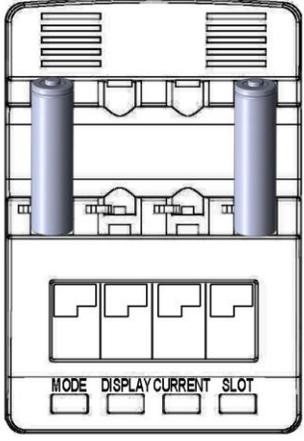
If you want to select the same charge current for multiple batteries at the same time, it is best to insert all four batteries into the charger, re-power the charger again, then press **CURRENT**, and all batteries will charge at the same current.

If a different working mode or display mode is desired for a particular slot, press the **SLOT** button to

select the desired slot and then press **MODE** or **DISPLAY** to change the mode.

The charging current can be adjusted from 100mA to 1400mA in 200mA per increments.

The following table provides the ideal configuration for two battery charging as well as the charging current for two and four battery operation.

Battery configuration		
Maximum charging current per slot	1000 mA	1400 mA

The following table provides the maximum charging current for several battery configurations.

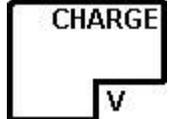
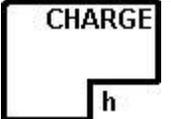
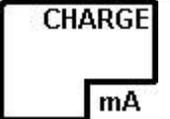
Slot 1	Slot 2	Slot 3	Slot 4
1400 mA	--	--	--
1400 mA	--	--	1400 mA
--	1000 mA	1000 mA	--
1400 mA	1000 mA	1000 mA	--
1000 mA	1000 mA	1000 mA	1000

5.2.5 Display Modes (DISPLAY button)

Press the **DISPLAY** button to change the display mode selection for all four battery slots.

If you wish the change the mode for a particular slot, press the **SLOT** button until the desired slot is flashing.

Press the **DISPLAY** button to toggle between **Voltage**, **Accumulated Capacity**, **Time Elapsed**, and **Current** display modes.

			
Voltage	Accumulated Capacity	Time Elapsed	Current

- 1. Charge/Discharge Voltage.** The instantaneous battery voltage (in Volts) is displayed. If the

battery is full, **FULL** will be displayed.

2. **Charge/discharge Accumulated Capacity.** The accumulated battery capacity (in mAh) of the current cycle is displayed.
3. **Charge/discharge Time Elapsed.** The charging/discharging time (in hours:minutes) of the current cycle is displayed.
4. **Charge/discharge Current.** The instantaneous current (in mA) is displayed.

5.2.6 Operational Modes

1. **Charge Mode.** The rechargeable battery is charged up to its maximum capacity.
2. **Discharge Mode.** The discharge mode is used to reduce the “memory effect”. The rechargeable battery is discharged to a preset battery voltage (0.9v). Discharge current is always half of the selected charge current. Once discharged, you can manually recharge the battery.
3. **Refresh Mode.** A rechargeable battery is charged and discharged repeatedly to optimize to its maximum capacity. Old rechargeable batteries or rechargeable batteries that have not been used for a long period of time can be restored to their rated capacity. Depending on the selected charging current, it can take days before completed. The refresh mode will complete three discharge and charge cycles before completed. Discharge current is always half of the selected charge current.
4. **Test mode:** The test mode checks the present capacity of the rechargeable battery. The maximum capacity is determined by discharging the rechargeable battery after fully charged. If the maximum capacity is much lower than the rated capacity then it may be near its end of life.
5. **Quick Test mode:** The charger will analyze the dynamic internal battery resistance by applying a load current, and measuring the current.

This current reading is referred to the “voltage drop” detected on the battery. In about 10 seconds,, the tested battery resistance will be displayed in milliohms.

A good quality battery, internal resistance is low: in the range of 20 to 80 milliohms. If the battery internal resistance is over 500 milliohms, then it may be near its end of life. Always use batteries with similar load resistance when used in serial to achieve maximum battery life.

Alkaline and any other 1.5v batteries can be tested on this charger. If a completely empty or “dead” battery is tested, it is impossible to measure the load resistance.

Please note that since the internal battery resistance can be very small, and contact resistance can be a major factor, the same battery tested in different slots or even at the same slot with different contact conditions can result in a reading variation as much as 10% to 20%. This is normal.

6 Overheating Protection

The BC-2000 includes comprehensive overheating protection. There are four independent over-temperature battery sensors and two independent over-temperature control board sensors.

1. If any battery temperature exceeds 140 degF (60 degC), the charging or discharging function will be halted. The charging or discharging functions will resume when the battery temperature drops below 104 degF (40 degC).
2. If the control board temperature exceeds 171 degF (77 degC), the charging or discharging function will be halted for the two associated batteries. The charging or discharging functions will resume when the board temperature drops below 122 degF (50 degC).

7 Maintenance

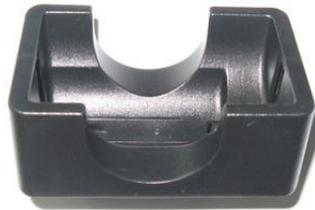
The device is maintenance-free, but should be cleaned occasionally. When cleaning, the device must be removed from any power source. Only use a dry and soft cloth to clear the housing of the charger. Do not use liquid, abrasives or solvents.

8 Specifications

Operating Voltage	12 Vdc	
Power Adapter	Input:	100~240V ~ , 50/60Hz
	Output:	12V DC
Charging Current range	200 ~ 1400 mA	
Discharging Current range	100 ~ 500 mA	
Max. Charging Capacity	1 ~ 20000mAh	
Operating Temperature	0 to 40 degC / 32 to 104 degF	

9 Accessories

A conversion kit (BC-2000-CONVERT) allows C and D size rechargeable batteries to be charged from the BC-2000. This product is available at AmbientWeather.com.



10 Glossary of Terms

Term	Definition
Battery load resistance	The internal resistance of a battery is dependent on the specific battery's size, chemical properties, age, temperature and the discharge current. The units of measure is ohms.
mA	Milli-amps, or battery current units of measure
mAh	Milli-amp-hours, or battery capacity units of measure
Memory effect	Memory effect is an effect observed in nickel cadmium and nickel-metal hydride rechargeable batteries that causes them to hold less charge. It describes the specific situation in which certain NiCd and NiMH batteries gradually lose their maximum energy capacity if they are repeatedly recharged after being only partially discharged. The battery appears to "remember" the smaller capacity. The source of the effect is changes in the characteristics of the underused active materials of the cell.

NiCd	The nickel–cadmium battery (NiCd battery or NiCad battery) is a type of rechargeable battery using nickel oxide hydroxide and metallic cadmium as electrodes. The abbreviation Ni-Cd is derived from the chemical symbols of nickel (Ni) and cadmium (Cd).
NiMH	A nickel–metal hydride battery, abbreviated NiMH or Ni–MH, is a type of rechargeable battery. Its chemical reactions are somewhat similar to the largely obsolete nickel–cadmium cell (NiCd). NiMH use positive electrodes of nickel oxyhydroxide (NiOOH), like the NiCd, but the negative electrodes use a hydrogen-absorbing alloy instead of cadmium, being in essence a practical application of nickel–hydrogen battery chemistry. A NiMH battery can have two to three times the capacity of an equivalent size NiCd, and their energy density approaches that of a lithium-ion cell.
null	No logical value. Can also mean zero or open circuit (infinity)

11 Troubleshooting Guide

If your question is not answered here, you can contact us as follows:

1. Email Support: support@ambientweather.com
2. Technical Support: 480-346-3390 (M-F 8am to 4pm Arizona Time)

Problem	Solution
Battery voltage always reads “null”	The battery is defective or installed incorrectly. Immediately remove and inspect the battery polarity. Discard the battery if defective.
Battery is excessively hot to the touch.	The battery is defective or installed incorrectly. Immediately remove and inspect the battery polarity. Discard the battery if defective.

12 Liability Disclaimer

Reading the “User manual” is highly recommended. The manufacturer and supplier cannot accept any responsibility for any incorrect readings and any consequences that occur should an inaccurate reading take place.

This product is not to be used for medical purposes or public information.

The specifications of this product may change without prior notice.

This product is not a toy. Keep out of the reach of children.

No part of this manual may be reproduced without written authorization of the manufacturer.

Ambient, LLC WILL NOT ASSUME LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR OTHER SIMILAR DAMAGES ASSOCIATED WITH THE OPERATION OR MALFUNCTION OF THIS PRODUCT.

13 FCC Statement

Statement according to FCC part 15.19:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Statement according to FCC part 15.21:

Modifications not expressly approved by this company could void the user's authority to operate the equipment.

Statement according to FCC part 15.105:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

14 Warranty Information

Ambient, LLC provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship.

This limited warranty begins on the original purchase date, and is valid only on products purchased and used in the United States, only to the original purchaser of this product, and only from an authorized dealer. To receive warranty service, the purchaser must contact Ambient, LLC for troubleshooting and service.

Warranty service can only be performed by an Ambient, LLC authorized service representative. The original receipt must be provided upon request as proof of purchase to Ambient, LLC.

Ambient, LLC will replace this product with new or reconditioned parts or products, if found to be defective during the limited warranty period specified above.

Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

The owner must pay any shipping charges incurred in getting your Ambient, LLC product to a Ambient, LLC for replacement or repair. Ambient, LLC will pay reasonable return shipping charges to the owner of the product.

Your Ambient, LLC warranty covers all defects in material and workmanship with the following specified exceptions: (1) damage caused by accident, unreasonable use or neglect (including the lack

of reasonable and necessary maintenance); (2) damage resulting from failure to follow instructions contained in your owner's manual; (3) damage resulting from the performance of repairs or alterations by someone other than an authorized Ambient, LLC authorized service center; (4) units used for other than in the manner described in this manual.

15 Disposal

Please help in the preservation of the environment and return used batteries to an authorized depot. The electrical and electronic wastes contain hazardous substances. Disposal of electronic waste in wild country and/or in unauthorized grounds strongly damages the environment.

